

## MAINTENANCE (FILTER REPLACEMENT)


1. To change a filter, proceed as follows:

2. Close the 3-way valve.

3. Open the drinking water faucet to release pressure.

4. Disconnect the plug from power outlet.


5. Remove the cover (front or back), from the main unit.

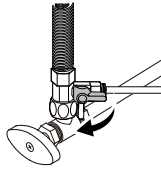

### NOTICE

- The filters need to be replaced when the corresponding indicator start to blink prompting filter replacement
- Both filters have a limited service life.
- Changes in taste, odor and color can also indicate manual filter replacement is required.


6. Move up the locking handle and Pull out filter from the unit.

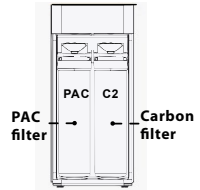


### NOTICE

Please make sure the PAC filter on the left side and the Carbon filter is on the right side, these positions are not interchangeable. ( Fig. 16)


7. Insert new filter (The bottom of the filter should be inserted into the base of the unit).

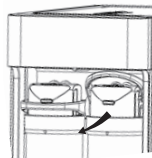

8. Align the filter nozzles with ports of the system then pull down the locking handle.

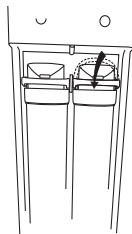

9. Install the cover.

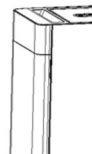

### PROMPTED FILTER REPLACEMENT

10. After the product has completed its start up, press and hold the button (Reset) for 3 seconds.
11. Open the systems faucet and allow water to run for at least 20 minutes to flush filters before drinking the water for the first time.
12. Press the (Flush) button to flush newly replace filters.

### MANUAL FILTER REPLACEMENT

13. Press the button (Reset) to select the filter to be replaced. A blinking indicator signals which filter has been selected.
14. Once the correct filter is selected, press and hold the button (Reset) for 3 seconds until the indicator of the selected filter remains on.
15. Press the (Flush) button to flush newly replace filters.

### NOTICE

Any other service not mentioned in this manual should be performed by an authorized dealer.